


Deck and Porch Construction in Termite Management Areas

Ontario Building Code, 2006

Below $17\frac{3}{4}$ " wood must be pressure treated

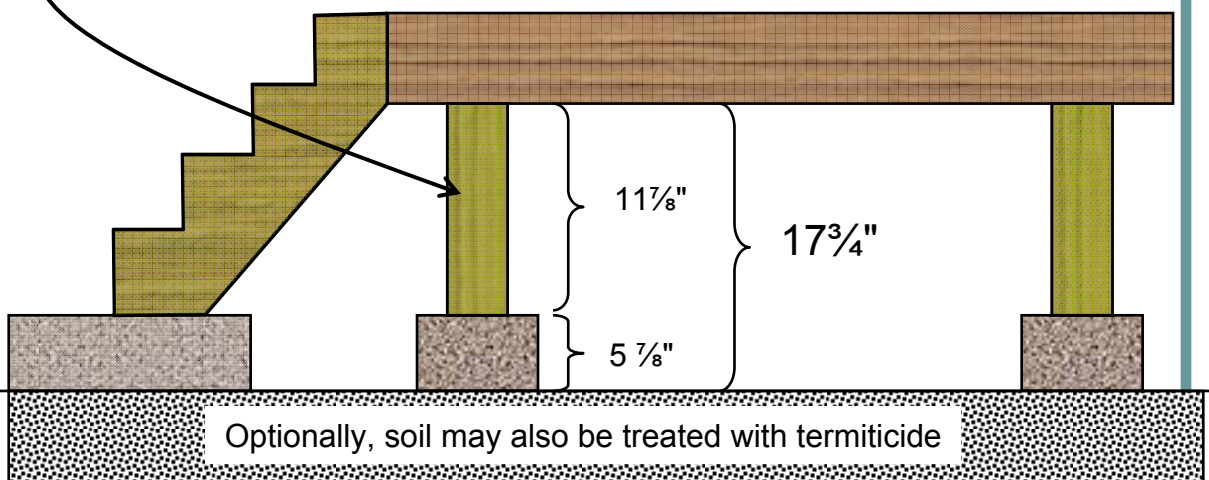

Construction Tips in Termite Management Area

The Ontario Building Code requires:

- Bottom step of stair stringer must rest on concrete
- Decks and porches must be on min. 6" concrete
- Footing or pier wood elements between 6-18" must be pressure treated
- There must be a minimum 18" clearance